
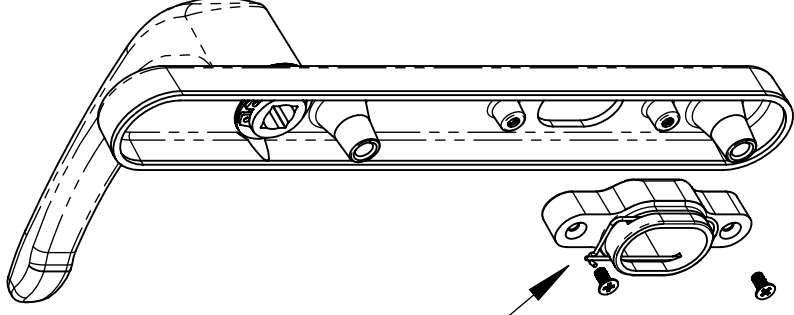


ASSEMBLY DETAILS OF COMPOSITE THUMBTURN INTO DOOR HANDLE

HANDLE PREP

STEP 1

Remove Door Handle and unscrew Keyway Adaptor

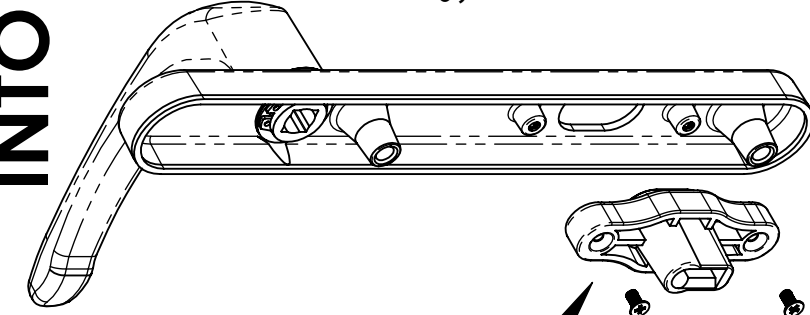


Fit Handle Sleeve/Clip Sub Assembly (from Assembly Pack) to Handle Backplate using the M3 Csk Hd Screws supplied.

THUMBTURN ASSEMBLY


STEP 2

Pre-Assembled Body

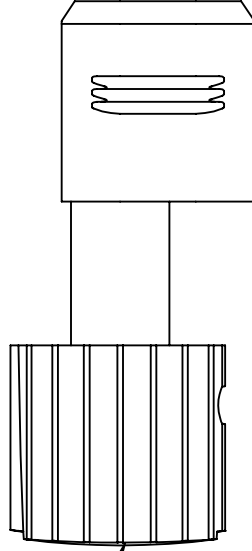


STEP 3

Insert Key into Thumbturn Body

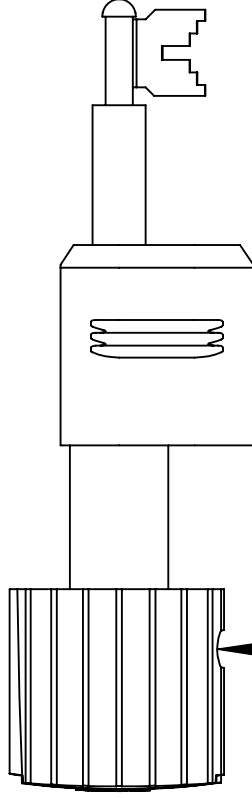


STEP 4


With Key in position, tighten Grubscrew with Allen Key provided.

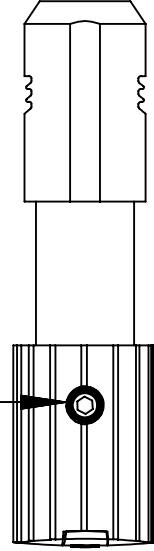

Insert fully until the end of Key is flush with body

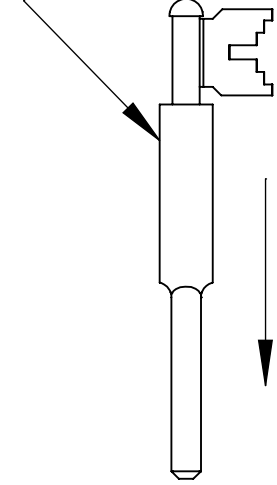


Cut Key taken off the Lock Keyset and inserted into assembled body.

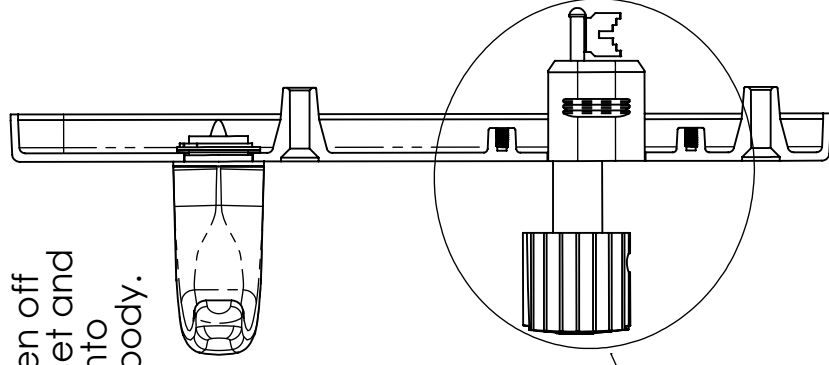

STEP 5

Fit and locate Thumbturn into handle until the first click is heard.

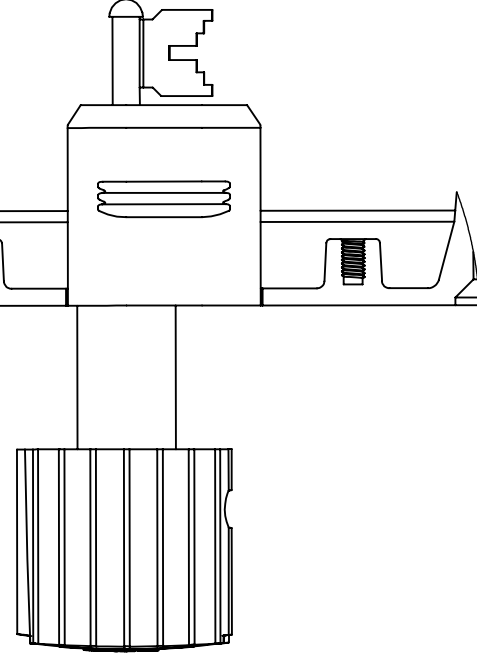

STEP 6



Offer Handle Assembly to Door and finger tighten the 2 fixing screws.

Push and click Thumbturn Body into Handle Assembly until the front face of the Thumbturn Body is flush/sub flush with the Handle Backplate, the Thumbturn Body will now be up against the Lock Case.

Depress the Knob to engage the Key into Lock Case and operate the Lock.

At this point, fully tighten the 2 Handle Screws.

Release the Knob so retracting the Key from the Lock Case.

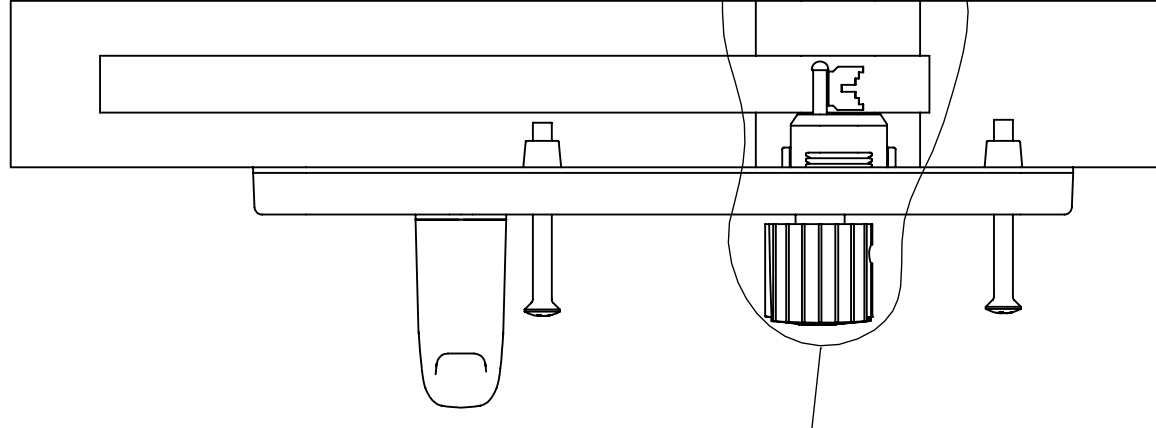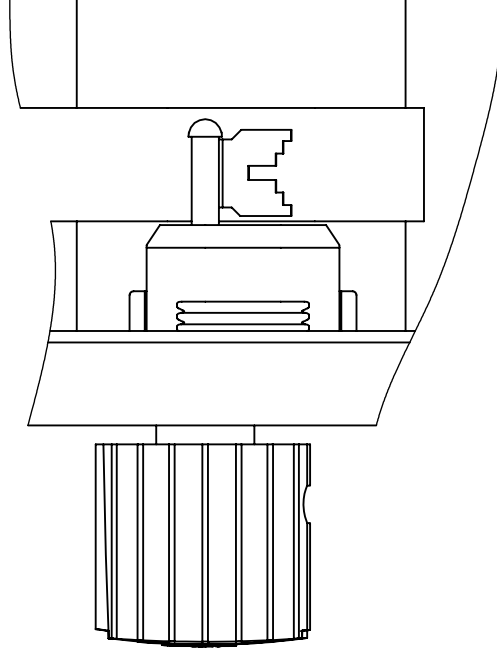

STEP 7

With the Thumbturn in place and the Door open, throw the Lock into "Locked position" by lifting the Handle 45 deg upwards, release handle, engage the Thumbturn into the Lock, turn the Key 360 deg and allow the Knob to spring out. The Lock should now be dead-locked. Reverse the action to unlock the Lock and pull the Handle down to unlock the Locking features.